


Stainless TrashScreen™


Flat to Round Fiberglass Adapter Tray

INSTALLATION INSTRUCTIONS

To be completed prior to Stainless TrashScreen™ Installation

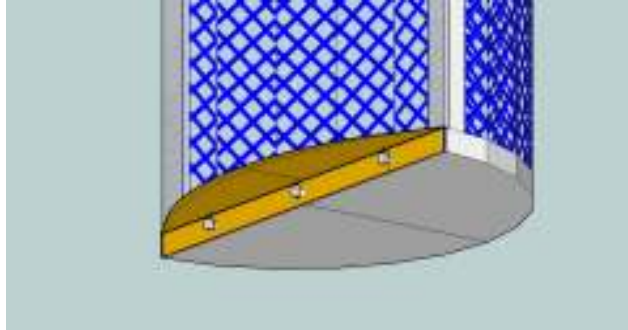


Bolt the Adapter Tray to the back flange of the Stainless TrashScreen™, with the enclosed 3/8" bolts and nuts

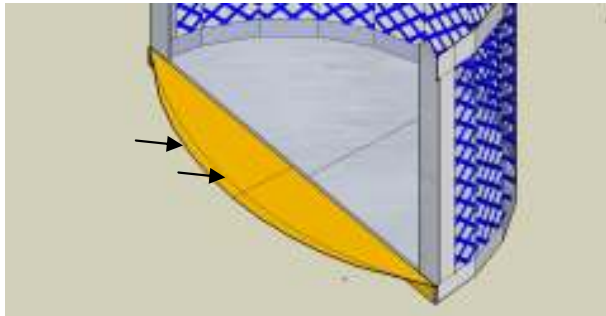

If necessary, trim the adapter to fit the curve of the manhole.

NOTE: alternate diameters are scribed into the adapter surface to aid trimming.

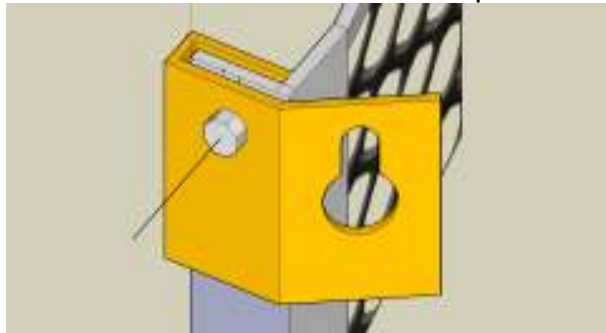

Attach the 2 hanger clips to the existing keyhole slots at the top of the Stainless TrashScreen™ frame with the enclosed 3/8" bolts and nuts. (Pay attention to left and right handed keyholes)

Installation Kit Items included with each TrashScreen™ Flat to Round Adapter Tray:

(5) 3/8" Bolts
(1) Left Hanger Clip
(1) Adapter Tray

(5) 3/8" Nuts
(1) Right Hanger Clip
(2) Anchors

VISIT OUR WEBSITE WWW.BMPINC.COM

Installation Instructions for all SNOUT® products are available on the BMP Website